


MS2323 Stratos Series – Dual Cable Scanner Scale Setup

Scale Configuration

Scan the following bar codes, one at a time, using the vertical window of the scanner. Wait for the confirmation beep tones after each bar code scan.


Scan Dual Cable Interface

Dual Cable Mode

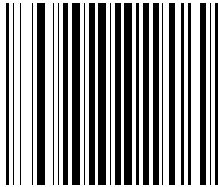


Set scale RS232 protocol to NCI-ECR

NCI-ECR Protocol

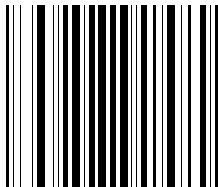

Set the scale communication parameters to 7 data bits, even parity.


7data Even Par

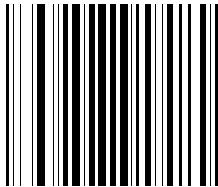

Scale = 7 Data Bits; Even Parity

Save the Data

Save Data

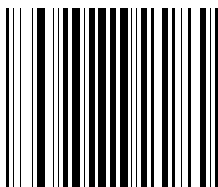

The scanner is now configured for Dual Cable Serial Data.